## Owner's Manual & Assembly Instructions

# Wall Shelf Model No. SS900-A 697.68204-A





# 10-24 Hex Nut (30)


# 10-24 x 1/2" Bolt (30)

- 1 Place two rear posts on a flat surface parallel to each other. Position shelves at desired location and fasten with bolts and nuts.
- 2 Place **front posts** opposite the rear posts and secure to shelves with bolts and nuts.
- 3 Fasten **braces** to the inside of rear posts and inside of front posts with bolts and nuts, as shown.

#### Keep this Owner's Manual for future reference.

\* If you find a part is missing, include the model no. of your shelf and contact:

Arrow Group Industries, Inc. Customer Service Dept.
Route 50 East Breese, Illinois 62230
1-800-851-1085

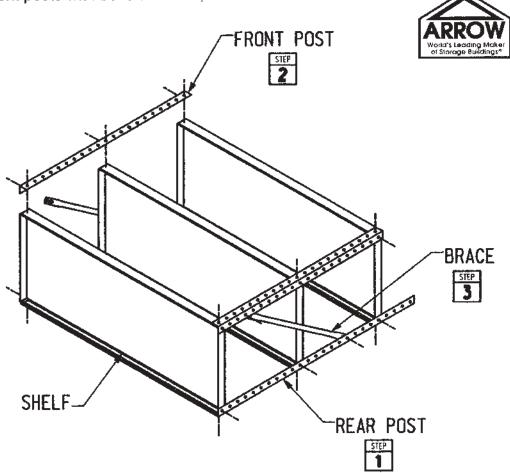




### **Mounting Instructions**

#### ASSEMBLY PROCEDURE WHEN MOUNTING TO VERTICAL SIDED BUILDINGS

- 1 Locate shelf unit on desired wall. Drill two 1/4" (0,64cm) dia. holes through upper wall angle and wall panel 28-3/8" (72,07cm) apart, 9/16" (1,43cm) below top flange of angle.
- 2 Using a square or level measure down 28-5/16" (71,91cm) from each hole. Check bottom holes to make sure they are 28-3/8" (72,07cm) apart. Drill two 1/4" (0,64cm) dia. holes at these locations.
- 3 Temporarily remove the two bolts and nuts from the back of the bottom shelf. Position shelf, aligning holes in rear posts with holes drilled in panel and fasten with four #10-24x1/2" bolts and nuts provided, as shown.

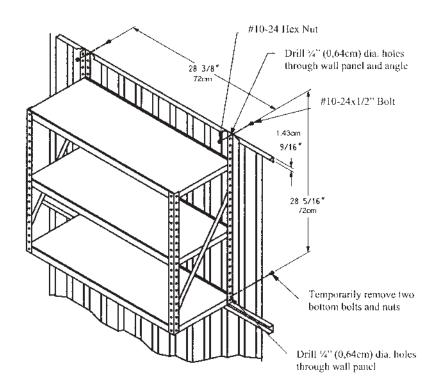

### ASSEMBLY PROCEDURE WHEN MOUNTING TO HORIZONTAL SIDED BUILDINGS OVER VERTICAL WALL STUDS

- 1 Follow directions for Steps 1 and 2 above.
- 2 Temporarily remove the two bolts and nuts from the back of the bottom shelf. Position shelf, aligning holes in rear posts with holes drilled in panel and fasten with four #10-24x1-1/2" bolts and nuts and either 3/4" (1,90cm) or 1" (2,54cm) shims. Hardware for mounting shelf unit is not supplied. Consult your local hardware store for these parts.

