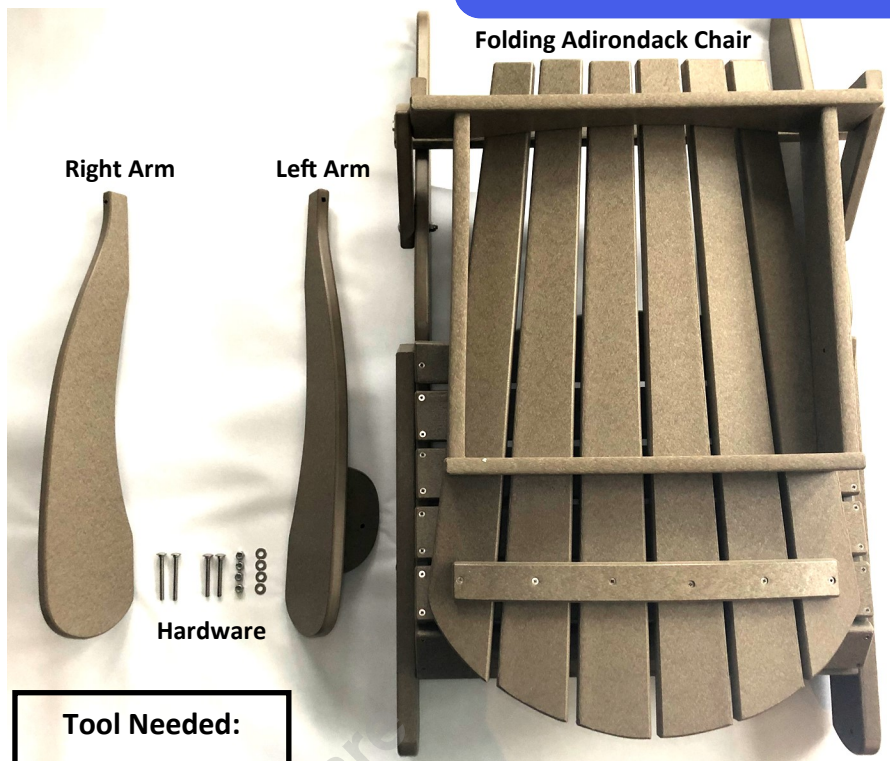
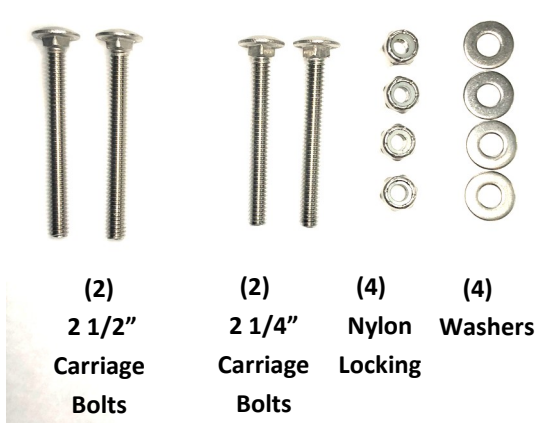
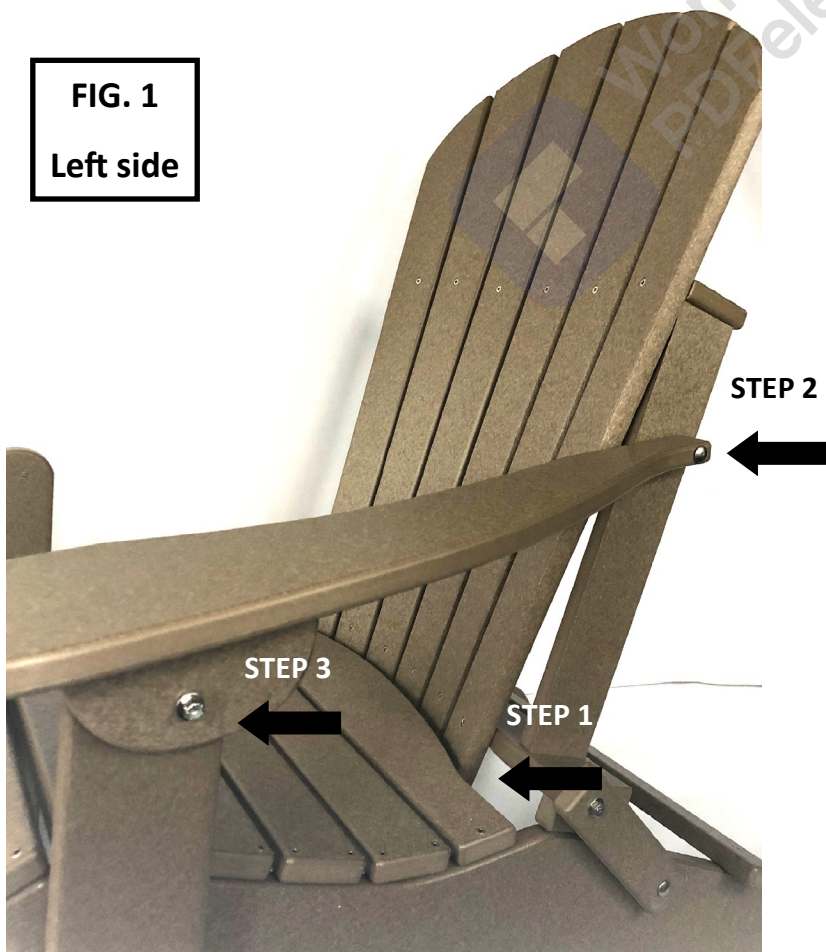


INCLUDED IN THIS SHIPMENT

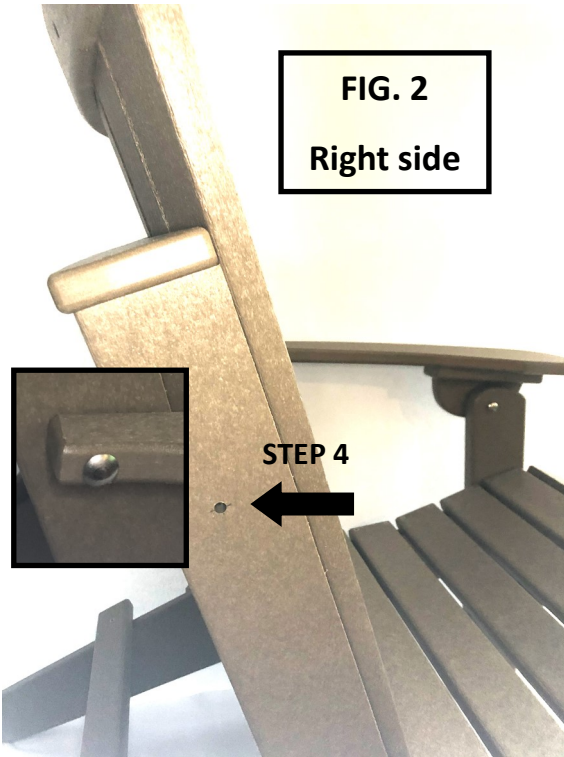
Tool Needed:
7/16" Wrench

FIG. 1**Left side**


Step 1: Open chair so that the lower back is flush with the seat. (See Fig. 1)

Step 2: Place Left Arm on the back bracket and attach with a 2 1/2" Carriage Bolt, Washer and Nut.

Step 3: Attach the front of the arm with a 2 1/4" Carriage Bolt, Washer and Nut.

FIG. 2**Right side**

Step 4 Place Right Arm on the back bracket and attach with a 2 1/2" Carriage Bolt, Washer and Nut. (As done in Step 2)

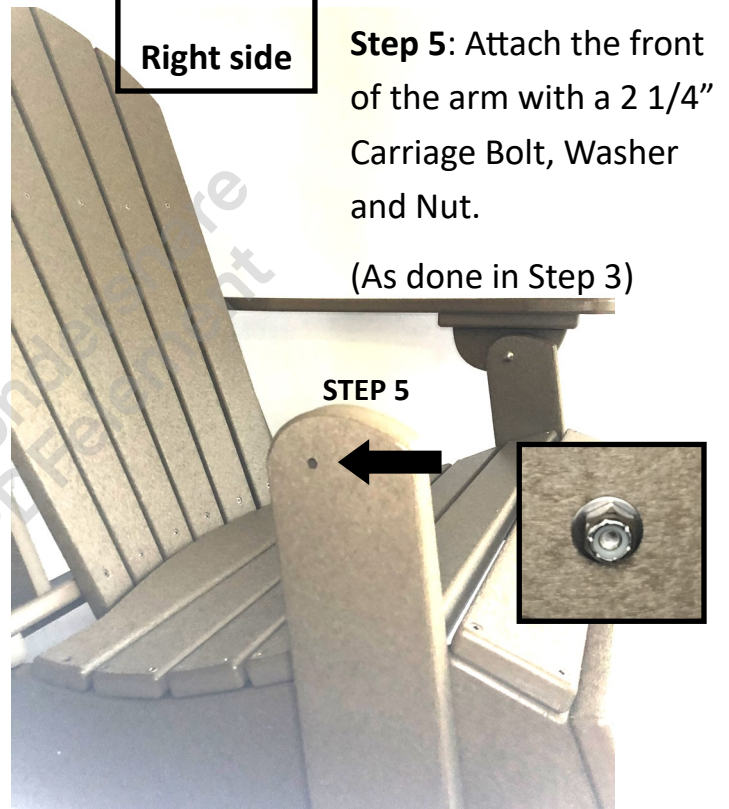FIG. 3**Right side**

Step 5: Attach the front of the arm with a 2 1/4" Carriage Bolt, Washer and Nut. (As done in Step 3)



Thank you for buying
Green Country Decor!

ENJOY!

