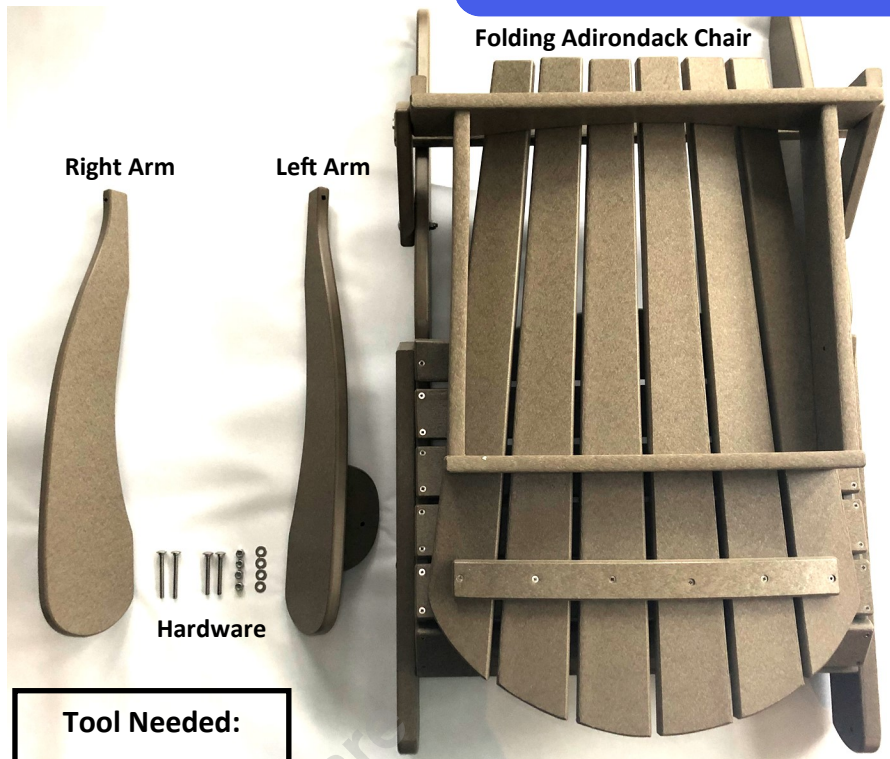
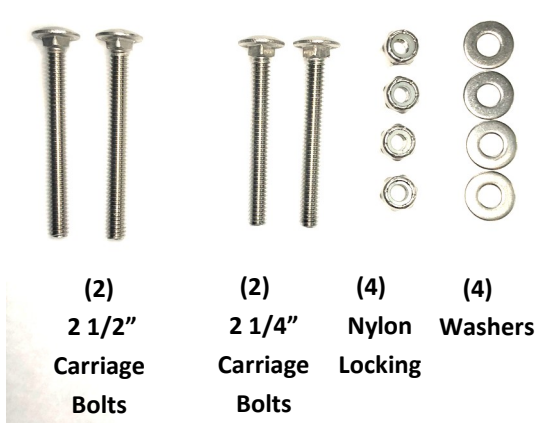
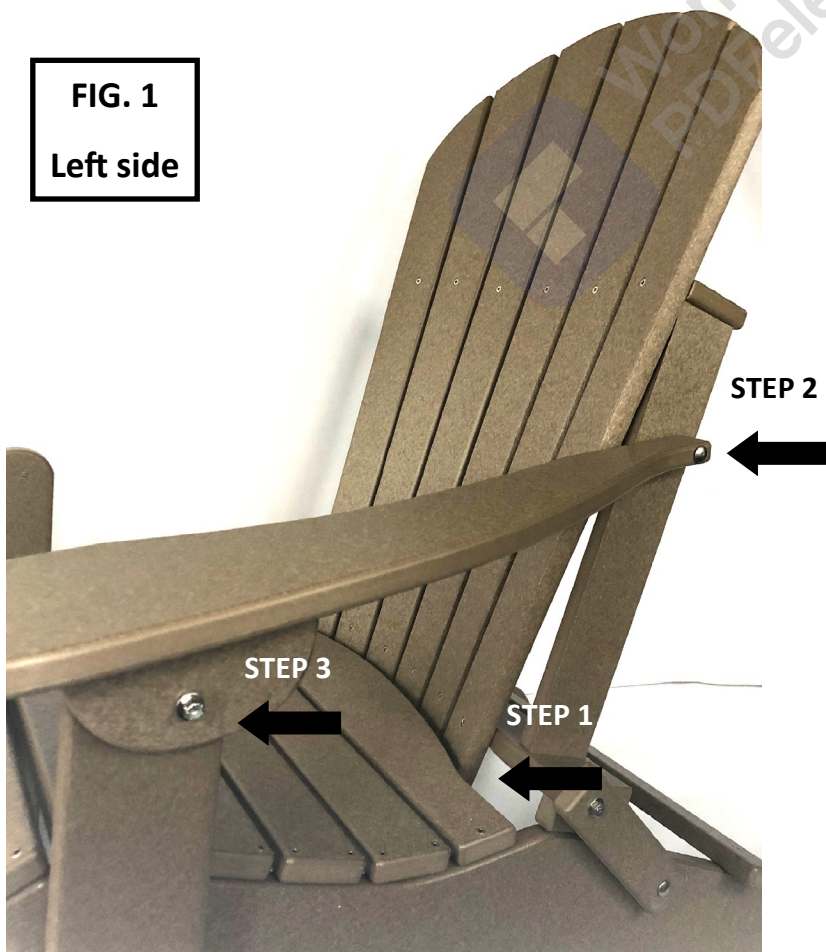


**INCLUDED IN THIS SHIPMENT**

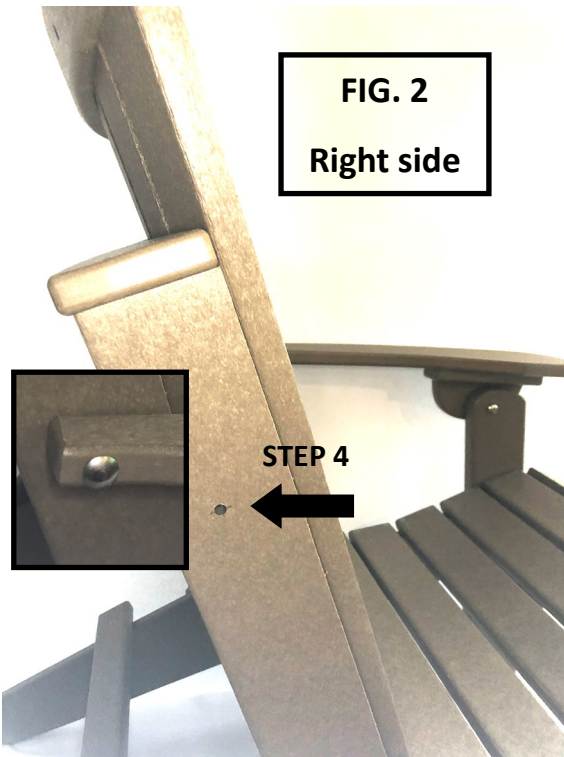
**Tool Needed:**  
7/16" Wrench

**FIG. 1****Left side**


**Step 1:** Open chair so that the lower back is flush with the seat. (See Fig. 1)

**Step 2:** Place Left Arm on the back bracket and attach with a 2 1/2" Carriage Bolt, Washer and Nut.

**Step 3:** Attach the front of the arm with a 2 1/4" Carriage Bolt, Washer and Nut.

**FIG. 2****Right side**

**Step 4** Place Right Arm on the back bracket and attach with a 2 1/2" Carriage Bolt, Washer and Nut. (As done in Step 2)

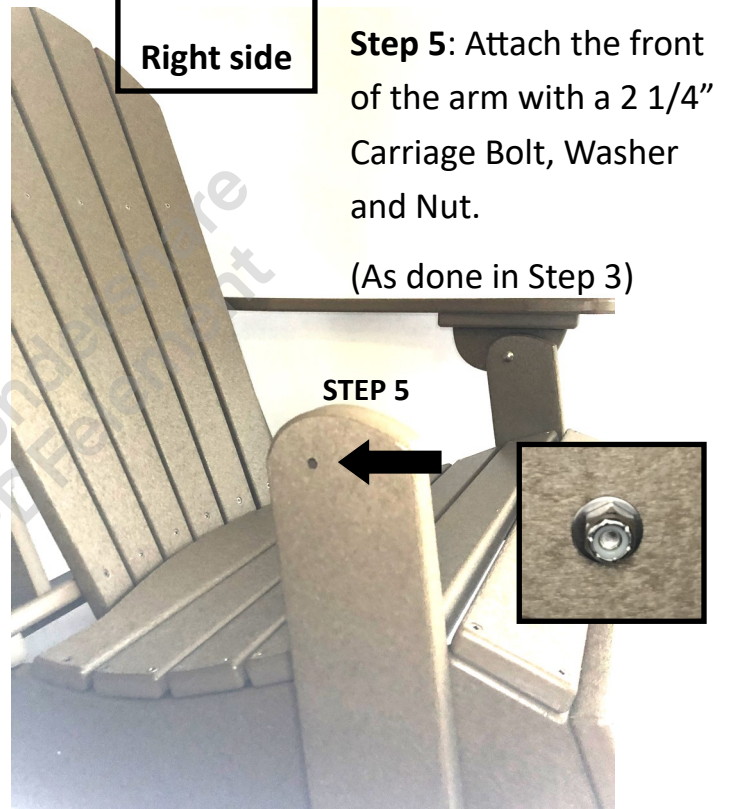**FIG. 3****Right side**

**Step 5:** Attach the front of the arm with a 2 1/4" Carriage Bolt, Washer and Nut. (As done in Step 3)



Thank you for buying  
*Green Country Decor!*

**ENJOY!**

